 




Function Introduction

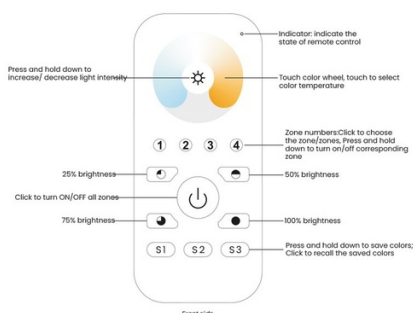

Pair with RF receiver (Method 2)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Power of and power on the receiver
- Step 4:**
Choose and click a zone number (zone 4) e.g. 1 twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

CCT RF touch dimmer control for led lighting up to 4 zones - SUNRICHER - Perfect RF

Ref. SR-2819S-CCT

Temperaturkontrolleren for LED'ernes farve SR-2819S-CCT er en fjernbetjening, der tilbyder en hurtig og præcis justering af farvetemperaturen og en uafhængig regulering af lysstyrken for hver hvid nuance. Designet med et berøringsfarvehjul kan temperaturkontrolleren justere farvetemperaturen for de naturlige hvide, varme hvide og kolde hvide LED'er.


Pair with RF receiver (Method 1)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status.
- Step 4:**
Choose and click a zone number (zone 4) e.g.
- Step 5:**
Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

Product data

Certifikater	CE, ROHS
Klasse energieffektivitet	A+ (2021)
Farvekontrol	CCT
Mål (mm) LxIxh	120X55X17mm
Garanti	Ifølge lovbestemt garanti: 3 år
IP	IP20
Materiale	Plastik
Detektionsområde (m)	25000
Sensor	Nej
Nominel spænding (V)	4,5V/DC
Udendørs brug	Nej
Levetid (h)	35000

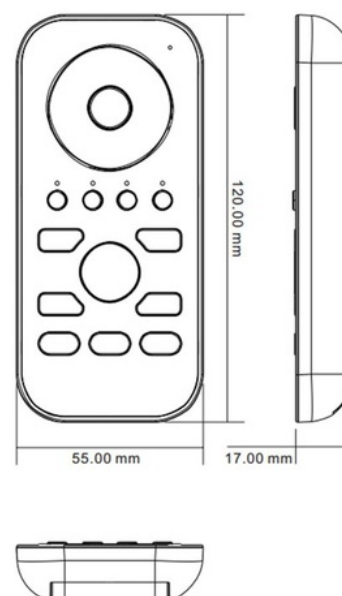 

Product variants

Reference

Attributes

SR-2819S-CCT

