 




Function Introduction

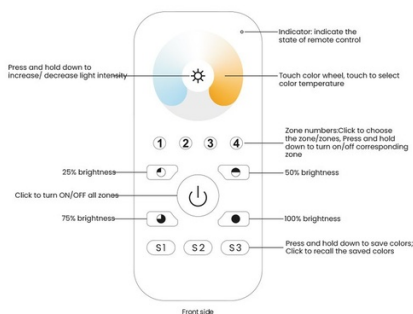

Pair with RF receiver (Method 2)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Power of and power on the receiver
- Step 4:**
Choose and click a zone number (zone 4) e.g. 1 twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

CCT RF touch dimmer control for led lighting up to 4 zones - SUNRICHER - Perfect RF

Ref. SR-2819S-CCT

The color temperature controller for LEDs SR-2819S-CCT is a remote controller that offers quick and precise adjustments to the color temperature and independent brightness regulation for each white. Designed with a touch color wheel, the color temperature controller can adjust the color temperature for natural white, warm white, and cool white LEDs.


Pair with RF receiver (Method 1)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status.
- Step 4:**
Choose and click a zone number (zone 4) e.g.
- Step 5:**
Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

Product data

Certs	CE, ROHS
Energy efficiency class	A+ (2021)
Color control	CCT
Dimensions (mm) LxWxH	120X55X17mm
Guarantee	According to legal warranty: 3 years
IP	IP20
Material	Plastic
Detection range (m)	25,000
Sensor	No
Nominal Voltage (V)	4.5V/DC
Outdoor Use	No
Service life (h)	<n_generated_text>35000</n_generated_text>

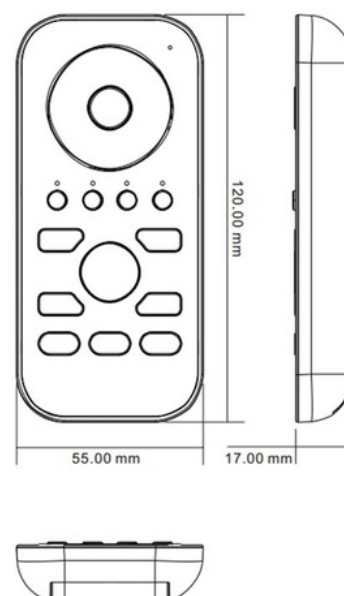 

Product variants

Reference

Attributes

SR-2819S-CCT

