 
 




Function Introduction

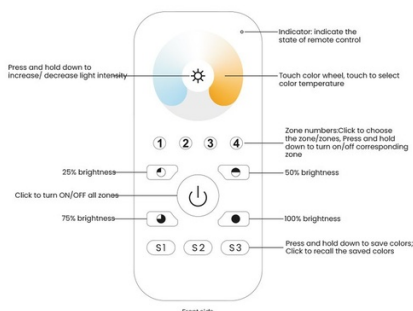

Pair with RF receiver (Method 2)

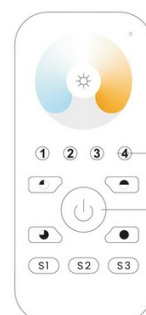

- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Power of and power on the receiver
- Step 4:**
Choose and click a zone number (zone 4) e.g. 1 twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

CCT RF touch dimmer control for led lighting up to 4 zones - SUNRICHER - Perfect RF

Ref. SR-2819S-CCT

LEDide värvitemperatuuri regulaator SR-2819S-CCT on kaugjuhtimisseade, mis pakub kiireid ja täpseid kohandusi värvitemperatuurile ning sõltumatut heleduse reguleerimist iga valge jaoks. Puutevärviratta kujundusega värvitemperatuuri regulaator suudab kohandada värvitemperatuuri looduslike, sooja ja külma valge LEDi jaoks.


Pair with RF receiver (Method 1)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status.
- Step 4:**
Choose and click a zone number (zone 4) e.g.
- Step 5:**
Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

Product data

Certifikaadid	CE, ROHS
Energiatõhususe klass	A+ (2021)
Värvikontroll	CCT
Dimensioonid (mm) Pxl x k	120X55X17mm
Garantii	Vastavalt seaduslikele garantiile: 3 aastat
IP	IP20
Materjal	Plastik
Avastamise vahemik (m)	25000
Sensor	Ei
Nominiaalpinge (V)	4,5V/DC
Väline kasutamine	Ei
Kasutusiga (h)	35000

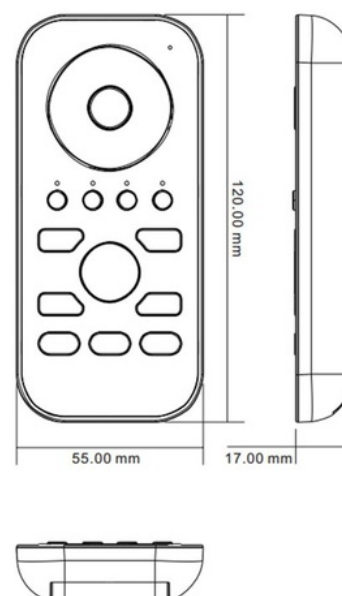 

Product variants

Reference

Attributes

SR-2819S-CCT

