 




Function Introduction

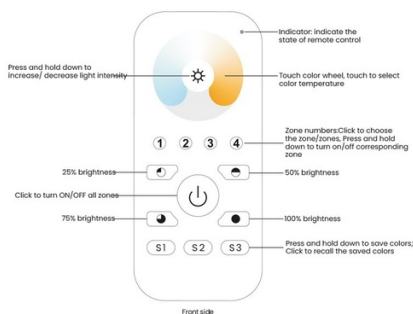

Pair with RF receiver (Method 2)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Power of and power on the receiver
- Step 4:**
Choose and click a zone number (zone 4) e.g. 1 twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

CCT RF touch dimmer control for led lighting up to 4 zones - SUNRICHER - Perfect RF

Ref. SR-2819S-CCT

De Faarfteperaturcontroller fir LEDs SR-2819S-CCT ass e remote controller, dee séier a präzis Anpassungen un der Faarfteperatur ubitt an onofhängeg Liichtreguléierung fir all wäiss. Entworf mat engem Touch-Faarfrad, kann de Faarfteperaturcontroller d'Faarfteperatur fir natierlech wäiss, waarm wäiss, a cool wäiss LEDs anpassen.


Pair with RF receiver (Method 1)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status.
- Step 4:**
Choose and click a zone number (zone 4) e.g.
- Step 5:**
Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

Product data

Certificaten	CE, ROHS
Klasse énergéiert Effizient	A+ (2021)
Faarfkontroll	CCT
Dimensiounen (mm) LxIxh	120X55X17mm
Garantie	Volgens gesetzlecher Garantie: 3 Joer
IP	IP20
Material	Plastik
Detektéierberäich (m)	25.000
Sensor	Neen
Nummspannung (V)	4,5V/DC
Uwendung am Freien	Nei
Letztzäit (h)	35000

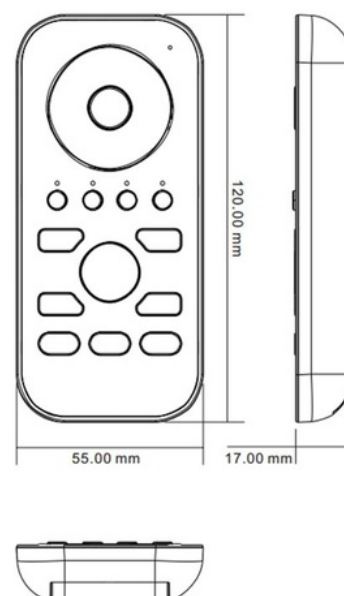 

Product variants

Reference

Attributes

SR-2819S-CCT

