 




Function Introduction

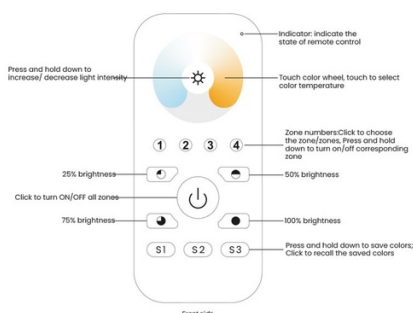

Pair with RF receiver (Method 2)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
RF LED Receiver
Power of and power on the receiver
- Step 4:**
Choose and click a zone number (zone 4) e.g. 1 twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

CCT RF touch dimmer control for led lighting up to 4 zones - SUNRICHER - Perfect RF

Ref. SR-2819S-CCT

Den färgtemperaturkontroller för LEDs SR-2819S-CCT är en fjärrkontroll som erbjuder snabba och precisa justeringar av färgtemperaturen och oberoende ljusstyrkereglering för varje vit. Utformad med ett beröringskänsligt färghjul, kan färgtemperaturkontrollen justera färgtemperaturen för naturlig vit, varm vit och kall vit LED.


Pair with RF receiver (Method 1)



- Step 1:**
Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:**
Click ON/OFF button to activate the remote
- Step 3:**
RF LED Receiver
Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status.
- Step 4:**
Choose and click a zone number (zone 4) e.g.
- Step 5:**
Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully

Product data

Certifikat	CE, ROHS
Klass energieffektivitet	A+ (2021)
Färgkontroll	CCT
Dimensioner (mm) LxIxh	120X55X17mm
Garanti	Enligt lagstadgad garanti: 3 år
IP	IP20
Material	Plast
Detekteringsområde (m)	25000
Sensor	Nej
Nominell Spänning (V)	4,5V/DC
Användning utomhus	Nej
Livslängd (h)	35000

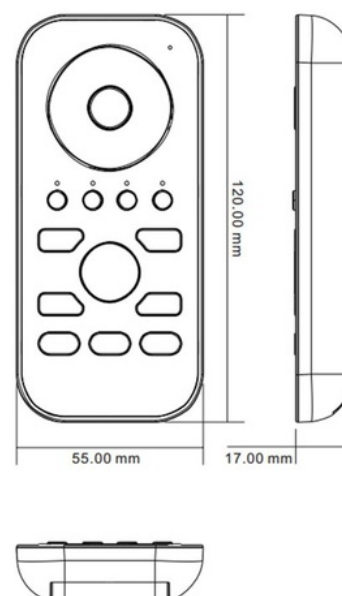 

Product variants

Reference

Attributes

SR-2819S-CCT

